

2 DIAL TAP TIMER





€ E5675 INSTRUCTION MANUAL



Introduction

CO1601 - 2 Dial Tap Timer

Thank you for purchasing this device, please read the operating instructions carefully to familiarize yourself with the features and modes of operation before using the 2 Dial Tap Timer.

Tap Timer Installation

Make sure the washer is in place, then screw the tap timer to tap. Turn it clockwise (hand tighten only.)

There should be no need to use thread seal tane as long as the tap seals onto the washer.

Battery Installation

- Hold the tap timer with the battery compartment facing you.
- Remove the battery compartment tray.

 Connect a 9V battery to the battery connector.
- Insert the connected battery and push in the battery tray. NOTE: When changing a battery. the timer will hold programme if you fit the new battery within 2 minutes.


NOTE: When changing the battery, make sure the battery compartment stays dry

USE ONLY 9V ALKALINE BATTERIES.


Simple 3 Step **Programming**

SET RUN TIME & WATERING INTERVAL THEN PRESS "ENTER" TO REFERENCE THE START TIME.


1. Turn "LEFT" dial to select RUN TIME.

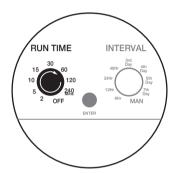

2. Turn "RIGHT" dial to select INTERVAL. ect from every 6 hours to every 7 days.

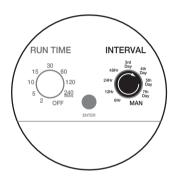

3. Push "ENTER" - The Red LED will appear solid for 3 seconds to confirm your selection Watering will start at the selected INTERVAL.

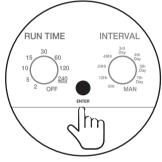


NOTE:

The time that the button is pushed is used as a reference start time. To change the program, simply follow the same 3 steps.

Manual Start


SETTING THE TAP TIMER TO START MANUALLY

1. Turn "LEFT" dial to select Run Time.

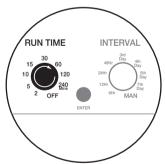

Runing a manual run time will not change any program previously entered. Watering will begin and end at selected Run Time. No need to move the dials.

 2. Turn "RIGHT" dial to MAN.






Stop or No Watering

HOW TO STOP THE TAP TIMER WATERING

1. Turn "LEFT" dial to the OFF position.

While the RUN TIME (Left) dial is in the "OFF" position NO watering will happen.

Note: To re-commence preset program, move the "RUN TIME" dial to any other position.

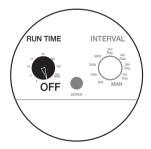

Red LED - Operating States

Red LED - OPERATING STATES as follows:

- 1. SOLID for 3 seconds: Confirms program & each time auto program is changed
- 2. FLASHING every 30 Seconds: "ALL IS RUNNING CORRECTLY".
- 3. FLASHING every 1 Second "BATTERY NEED CHANGING".

Extra Watering Cycles

The manual operation mentioned previously, can be used for running an extra cycle whilst the timer is programmed.

The "Manual" cycle will run immediately after the enter button is pressed.

The timer will resume the automatic program once the manual time has elapsed.

Fault Finding

- 1. Ensure your tap is turned on.
- 2. Ensure your battery is in good condition. USE ONLY ALKALINE BATTERY. 1 x 9V

Note: When the tap timer is not using an automatic program, it must be in the "OFF" position.

Turn the tap "OFF" when the tap timer is not in watering mode.

Clearing Memory

To clear an exisiting programme, remove the battery & wait until the timer resets (This can take up to 5

Alternatively, remove the battery and initiate a manual start which will clear the memory immediately.

Technical Data

HOLMAN - 2 Dial Tap Time

Product Code: CO1601

Maximum Water Pressure: 800 kPA. Minimal Water Pressure: 100 kPa.

Battery: Use a standard 9 Volt ALKALINE battery. Fluid: Only use cold water with NO added chemicals.

Frequency Options:

Every 6 hrs, 12 hrs, 24 hrs, 48 hrs, Every 3rd Day, Every 4th Day, Every 5th Day, Every 7th Day.

Run Time Options:

2. 5. 10. 15. 30. 60. 120 or 240 Minutes.

Warranty

Warranty: We will honour all statutory guarantees that this product is of acceptable quality. (including that it is fit for purpose)

HOI MAN Industries: 11 Walters Drive. Osborne Park, WA 6017. Ph: +61 8 9416 9999 www.holmanindustries.com.au

