





Table of Contents

Introduction	p1
Glossary	p2
Battery Installation	p3
Controller Installation	p4
Technical Data	p5
Programming	
Set Automatic Watering	p6
Changing Start Time	p7
Manual Start	p8
Stop or NO Watering	p9
Red LED - Operating State	sp1
Extra Watering Cycles	p1
Fault Finding	p1:
Notes	
Warranty	•
	Glossary

Introduction



CO3001 - 2 Dial Tap Controller

Thank you for purchasing this device, please read the operating instructions carefully to familiarize yourself with the features and modes of operation before using the 2 Dial Tap Controller.

Glossary



Battery Installation

- Hold the controller with the battery compartment facing you.
- Remove the battery compartment cover, lifting from one side
 Connect a 9V battery to the battery connector.
 Insert the connected battery

and press on the battery NOTE: When battery

is first fitted, it takes up to 1 minute for the battery indicato to assess the battery strength. NOTE: When

changing the battery, make sure the battery compartment stays dry.

hours selected.

is programmed.

USE ONLY ALKALINE BATTERIES.

Controller Installation

Make sure the filter (washer) is in place, then screw the controller to the faucet/tap by attaching the side with the female swivel hose thread connector to the tap or hose end, then turn it clockwise (hand tighten only). Connect the controller hose male thread side



Technical Data

HOLMAN Professional - 2 Dial Tap Controller

Product Code: CO3001.

Maximum Water Pressure: 800 KpA

Battery: Use a standard 9 Volt ALKALINE battery. Fluid: Only use cold water with NO added chemicals.

Frequency Options: Every 6 hrs, 12 hrs, 24 hrs, 48 hrs, Every 3rd Day, Every 4th Day, Every 5th Day, Every 7th Day.

Run Time Options: 2, 5, 10, 15, 30, 60, 120 or 240 Minutes.

Set Automatic Watering

- SET RUN TIME & WATERING INTERVAL
- 1. Turn "LEFT" dial to select RUN TIME 2. Turn "RIGHT" dial to select INTERVAL.
- 3. Push "ENTER" The Red LED will appear solid for 10 seconds to confirm your selections, and then run.

Watering will start in 24 hrs at the selected INTERVAL



TO CHANGE THE START TIME (Minimum 6 Hours)

1. While the Red LED is solid ON, turn the "RIGHT"

dial to select the DELAY time & press "ENTER" again. This moves the START time forward by the

RUN TIME will begin then & thereafter at selected INTERVAL.

Changing Start Time

Manual Start

SETTING THE CONTROLLER TO START MANUALLY

- 1. Turn "LEFT" dial to select RUN TIME.
- 2. Turn "RIGHT" dial to MAN and press "ENTER".

Note: Running a manual run time will not change any program previously entered.

Watering will begin and end at selected RUN TIME.



Stop or No Watering

HOW TO STOP THE CONTROLLER WATERING

1. Turn "LEFT" dial to the OFF position

While the RUN TIME (Left) dial is in the "OFF" position NO watering will happen.

Note: To re-commence automatic operation, move the "RUN TIME" dial to any other position.



Red LED - Operating States

Red LED - OPERATING STATES as follows:

1. SOLID:

10

5

Confirms program & allows "START TIME" change

 \bigoplus

2. FLASHING - 20 Seconds:

"ALL IS RUNNING CORRECTLY".

3. FLASHING - 1 Second: "BATTERIES NEED CHANGING".

Extra Watering Cycles

The manual operation mentioned previously, can be used for running an extra cycle whilst the timer

The "Manual" cycle will run immediately after the enter button is pressed.

The timer will resume the automatic program once the manual time has elapsed.



Fault Finding 1. Ensure your tap is turned on.

2. Ensure your battery is in good condition.

USE ONLY ALKALINE BATTERIES.

3. Your program will start immediately and then in 24 hours at the frequency selected.

Note: When the controller is not using an automatic program, it must be in the "OFF" position.

Turn the tap "OFF" when the controller is not in use.



Notes Notes

11

Notes

12

Notes Notes Warranty

Warranty: We will honour all statutory guarantees that this product is of acceptable quality.

(including that it is fit for purpose) HOLMAN Industries: 47 Walters Drive, Osborne Park, WA 6017.

Ph: +61 8 9204 1011 www.holmanindustries.com.au

CO3001 V4 Sheet M.indd 1