

Thanks for being a #SMARTGARDENER

We really appreciate having you as a customer, and would like to say thank you for choosing us.

We recommend registering your new product on our website. This will ensure we have a copy of your purchase and activate an extended warranty. Keep up to date with relevant product information and special offers available through our newsletter.

www.holmanindustries.com.au/product-registration/

HOLMAN
For the #SMARTGARDENER

Introduction

Your **Wi-Fi Hub** allows smartphone access to your **WX1 Tap Timer** from anywhere with internet access and the **Holman Home** app.

Holman Home provides your **WX1** with three irrigation start times, tap-to-run features and custom watering automation.

RF range: 917.2MHz~920MHz
 RF maximum output power: +10dBm
 Wi-Fi frequency range: 2.400 to 2.4835GHz
 Wi-Fi maximum output power: +20dBm
 Firmware version: 1.0.5
 Socket input voltage: AC 90V-240V 50Hz
 Socket output Voltage: AC 90V-240V 50Hz
 Socket maximum load current: 10A
 Socket operating temperature: 0-40°C

iOS is a trademark of Apple Inc. Android is a trademark of Google LLC. The Android robot is reproduced or modified from work created and shared by Google and used according to terms described in the Creative Commons 3.0 Attribution License. All other content is Copyright © Holman Industries 2020

HOLMAN

For the #SMARTGARDENER

Scan this QR code or visit holmanindustries.com.au/holman-home/ for more info on our Wi-Fi watering systems

Download on the App Store
 GET IT ON Google Play

Overview

WX1 Tap Timer

- 20/25mm BSP reducing bush
- 25mm tap adaptor
- TAP TIMER BUTTON
- Watering indicator
- 20mm BSP outlet
- Battery compartment

Wi-Fi Hub

- HUB BUTTON
- Power indicator
- Power plug
- Wi-Fi Socket for power

Model no: WX1TH

HOLMAN

Wi-Fi HUB + WX1

Wi-Fi Controlled Hub Socket with Tap Timer

www.holmanindustries.com.au

Installation

Installing Holman Home

- Download **Holman Home** to your mobile device via the **App Store** or **Google Play**
- Visit our website for more www.holmanindustries.com.au/holman-home/
- Open **Holman Home** on your mobile device
- You may be prompted to allow notifications—the app can still function if you choose to opt out
- Tap **REGISTER**
- Read our Privacy Policy and tap **AGREE** if you wish to proceed
- Follow the prompts to register a **Holman Home** account with your email or mobile number
- Ensure your country details are correct at this stage
- You may be prompted to allow access your location. This allows the app to show weather information, and can still function if you choose to opt out

Add the Wi-Fi Hub to Holman Home

- For the setup process, plug your **Wi-Fi Hub** to a power source near your Wi-Fi router
- Open **Holman Home** and add a new device by tapping **+** on the **HOME** screen



- Tap **GARDEN WATERING** and choose **Wi-Fi HUB**




- Follow the prompts from **Holman Home** to work through the **Wi-Fi Hub** setup process

Add the WX1 and Wi-Fi Socket to Holman Home

- Install 4x 1.5v AA batteries into the **WX1 Tap Timer**, with the contacts (a) pointing towards the front of the tap timer




- Using **Holman Home**, return to the **HOME** screen and tap the **Wi-Fi Hub**

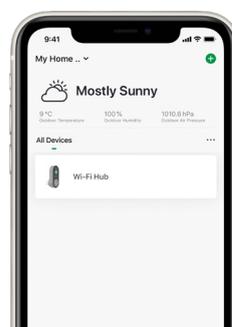

- In the **Wi-Fi HUB** screen, tap **ADD/VIEW DEVICES**



- In the next screen, tap **ADD DEVICES** and follow the prompts to connect your **WX1** and **Wi-Fi Socket**

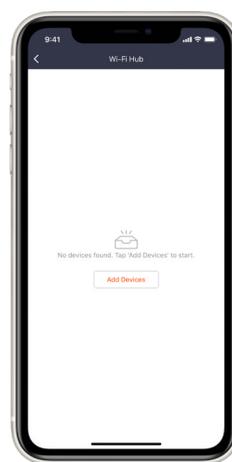

Positioning your Wi-Fi Hub and WX1

- Unplug your **Wi-Fi Hub** and move to your planned location
- This must be indoors and within your home Wi-Fi range
- Using the tap adaptor and reducing bush if needed, mount your **WX1** onto the desired tap
- The **WX1** uses a 917 MHz RF connection to communicate with the **Wi-Fi Hub**, and must be within a 50m range, line of sight, of the **Wi-Fi Hub**
- An additional three **WX1 Tap Timers** can be added to **Holman Home** via the **Wi-Fi Hub** as necessary

HOLMAN

For the #SMARTGARDENER

Warranty

HOLMAN

For the #SMARTGARDENER

2 Year Replacement Guarantee

Holman offers a 2 year replacement guarantee with this product.

In Australia our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

As well as your statutory rights referred to above and any other rights and remedies you have under any other laws relating to your Holman product, we also provide you with a Holman guarantee.

Holman guarantees this product against defects caused by faulty workmanship and materials for 2 years domestic use from the date of purchase. During this guarantee period Holman will replace any defective product. Packaging and instructions may not be replaced unless faulty.

In the event of a product being replaced during the guarantee period, the guarantee on the replacement product will expire 2 years from the purchase date of the original product, not 2 years from the date of replacement.

To the extent permitted by law, this Holman Replacement Guarantee excludes liability for consequential loss or any other loss or damage caused to property of persons arising from any cause whatsoever. It also excludes defects caused by the product not being used in accordance with instructions, accidental damage, misuse, or being tampered with by unauthorised persons, excludes normal wear and tear and does not cover the cost of claiming under the warranty or transporting the goods to and from the place of purchase.

Should you suspect your product may be defective and need some clarification or advice please contact us directly:


1300 716 188
support@holmanindustries.com.au
 11 Walters Drive, Osborne Park 6017 WA

If you are certain your product is defective and is covered by the terms of this warranty, you will need to present your defective product and your purchase receipt as proof of purchase to the place you purchased it from, where the retailer will replace the product for you on our behalf.

Manual Operation

Wi-Fi Hub

1. Tap the **Wi-Fi HUB** on the **HOME** screen devices list

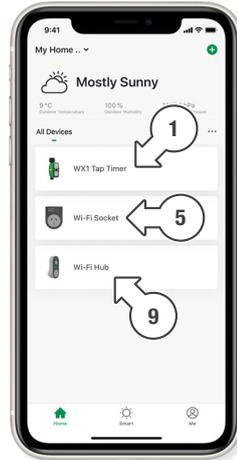

2. To add additional **WX1 Tap Timers** to your system, tap **ADD/VIEW DEVICES** and follow the prompts
3. For additional information about your **Wi-Fi Hub**, tap the pencil icon
4. Tap **<** to return to the **HOME** screen



Wi-Fi Socket

5. Tap the **Wi-Fi SOCKET** on the **HOME** screen devices list



7. Tap **SCHEDULE** for automated scheduling options
8. For additional information about your **Wi-Fi Socket**, tap the pencil icon
9. The **Wi-Fi Socket** can also be toggled manually using the **HUB BUTTON**

WX1 Tap Timer

9. Tap the **WX1 TAP TIMER** on the **HOME** screen devices list



11. For additional information about your **WX1 Tap Timer**, tap the pencil icon
12. Tap **MANUAL CONTROL** to access manual watering controls

13. The **MANUAL WATERING** is for one-off watering durations



15. For automated watering schedules, tap **STARTS**
16. For additional data from the **Smart Moisture Sensor**, tap **SENSOR**
17. For additional support, tap **HELP** or visit support.holmanindustries.com.au

Automation

Wi-Fi Socket

1. Tap the **Wi-Fi SOCKET** on the **HOME** screen devices list



2. This displays the **Wi-Fi Socket SCHEDULE** screen
3. Tap **ADD** to set up a schedule for the **Wi-Fi Socket**



4. Tap **REPEAT** to choose which days of the week to toggle the socket
5. Tap **NOTE** to add a custom description to your schedule
6. Toggle the **NOTIFICATION** switch to receive alerts when the schedule is triggered
7. Tap **SAVE** to set your schedule, or **<** to exit without saving



WX1 Tap Timer

10. Tap the **WX1 TAP TIMER** on the **HOME** screen devices list




11. Tap **STARTS** to access automated watering controls
12. This displays the **STARTS** screen for watering schedules
13. Tap **START A** to set one of three schedules as desired



14. This displays **START SETTINGS** for watering schedules



18. Tap each of the days as required to toggle watering days on or off
19. For shorter watering bursts in intervals tap **MIST**
20. This displays **MIST** timing
21. Use the **24 HOUR TIME** switch to toggle between 24hr and AM/PM time
22. Tap **START TIME** to open the clock and set a start time
23. Tap **RUN TIME** to open the timer and set a watering duration
24. Use **MISTING PERIOD** to set the overall duration of the misting program
25. Use **MIST TIME** to set the duration for each burst of misting
26. Use **INTERVAL** to set the amount of time between each burst
27. In either **WATER** or **MIST** mode, tap **SAVE** to set the desired schedule and return to the **STARTS** screen, or tap **<** to return without saving
28. As **START SETTINGS** are saved, the scheduled times will show on each **START**
29. The watering days will also be indicated at the top of the screen
30. To manually toggle **START** schedules on or off, use the switches on each start
31. To suspend all watering schedules for a set period of time (ie. during rain), tap **24H, 48H or 72H** under **RAIN DELAY** as desired
32. Tap **<** to return to the **HOME** screen when setup is complete

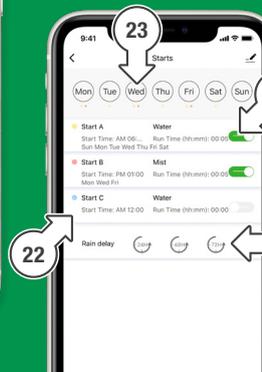

HOLMAN