




Thank you for purchasing a Holman GreenWall Slim Wall Mounted Kit.

Please keep your receipt as proof of purchase to validate the 1 year product warranty.

Please read this instruction manual prior to use.

GLOSSARY

CONTENT LIST

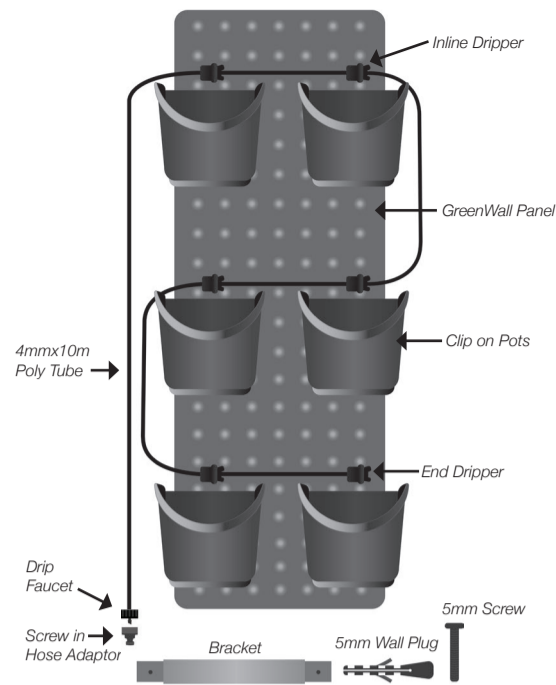


- 1x Wall Bracket
- 1x Panel
- 6x Clip-on Pots
- 2x 5mm Wall Plugs
- 2x 5mm Screws
- 1x 4mmx10m Poly Tube
- 5x Inline Dripper
- 1x End Dripper
- 1x Drip Faucet
- 1x Screw in Hose Adaptor

1. LOCATION

The location of your GreenWall will determine the success of your GreenWall. For the best results we recommend installing your GreenWall on North and West facing walls as they generally receive the most light and heat.

However, also consider your plant variation as this will also determine your ideal location.

2. MARKING THE LOCATION

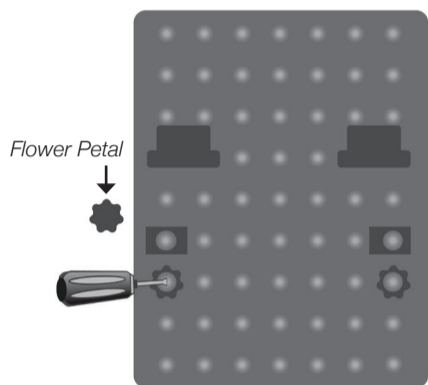

Hold the panel to the wall to decide the location of the panel. Ensure the panel is level. Find the two guide holes (the 2 holes with the flower petal around them) and with a sharp screwdriver mark the wall through the holes.

3. DRILLING THE LOCATION




If the GreenWall is going on a solid wall such as brick or concrete use a 6.5mm masonry bit to drill the 2 holes.

Insert the plastic wall plugs.

Fix the stainless steel bracket to the wall using the stainless steel screws.

4. HANGING THE BRACKET

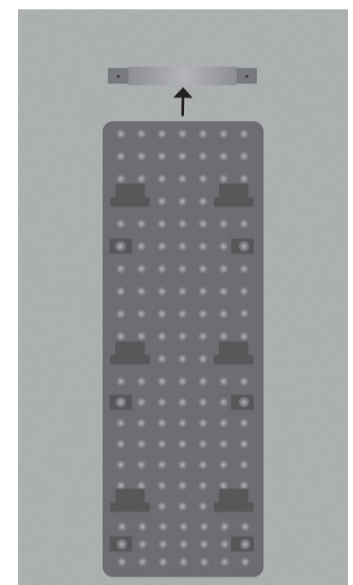

Attach the panel to the bracket.

5. HANGING THE POTS




TIP: Plant the pots before installing.

Once the pots are planted they are ready to be hung onto the panel.

Each pot has a flat hook at the rear. This slides into a slot on the panel. The slot is wider than the hook and this allows some movement when positioning the pots.

6. SETTING UP THE IRRIGATION

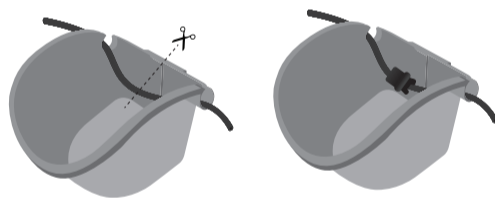

PART 1 - Once all the pots are connected to the panel you are ready to install the irrigation.

- 1) Run the poly tube through the groove at the back of the pots.
- 2) Leave some slack when running the tube around the pots.
- 3) Cut the poly tube and insert an inline dripper. To continue the chain, attach the remaining poly tube to the other end of the inline dripper (ensure you are placing the dripper above each pot).
- 4) In the last pot, finish the poly tube with the end dripper.



PART 2

- 1) Connect a garden hose or poly pipe to the hose adaptor.
- 2) Connect a Holman tap timer to your tap for automatic watering.
- 3) Attach the other end of the garden hose or poly pipe to the tap timer.
- 4) Turn on the water and test the drippers.

TAP TIMER

We suggest installing a Holman tap timer to automatically and accurately water your GreenWall. Schedule the tap timer to meet your required watering, this will then ensure your plants remain hydrated and healthy and encourage the best result for the growth of your GreenWall.

Hint: Watering for short intervals 3 or 4 times a day is recommended for the best result.

TROUBLE SHOOTING

Drippers are not working properly

If some drippers are not working well, you can unscrew them then flush them.

WARRANTY

HOLMAN GreenWall Slim Wall Mounted Kit with Watering Kit Included.

Product Code: GW1006
We will honour all statutory guarantees that this product is of acceptable quality. (Including that it is fit for purpose)

HOLMAN INDUSTRIES
11 Walters Drive,
Osborne Park, WA 6017
Ph: 1300 716 188
www.holmanindustries.com.au



For tips and tricks on watering and plant selection visit our website.

<https://www.holmanindustries.com.au/greenwall-vertical-gardening>